



Adjusting Projection Image Size

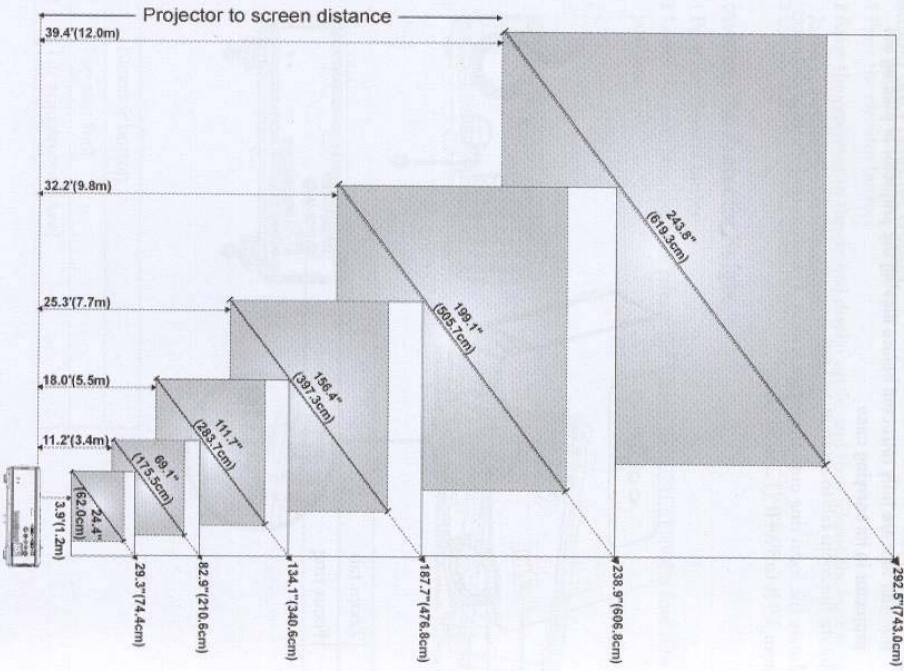

Screen (Diagonal)	Max.	83.9"	134.1"	187.7"	238.9"	292.5"
	Min.	24.4"	69.1"	111.7"	156.4"	199.1"
Max. (WxH)	23.4"X17.6"	66.3"X49.7"	107.3" X 80.4"	150.2" X112.6"	191.1" X 143.3"	234.0" X 175.5"
Min. (WxH)	5.0" X 4.7"	14.6" X 14.6"	44.7" X 41.4"	55.3" X 51.4"	89.4" X 67.0"	125.1" X 93.9"
Distance	39.4' (12.0m)	32.2' (9.8m)	25.3' (7.7m)	18.0' (5.5m)	11.2' (3.4m)	3.9' (1.2m)

* This graph is for user reference only.

Using the Control Panel

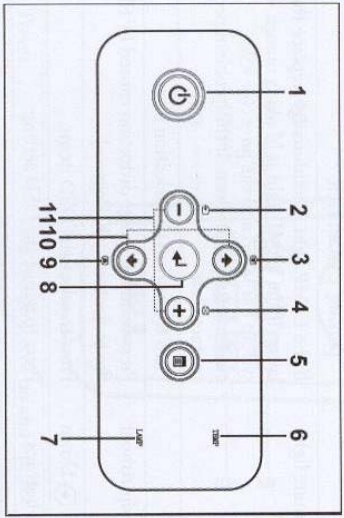

- 1 Power
Turn the projector on and off. For more information, see "Turning Your Projector On" on page 15 and "Turning Your Projector Off" on page 15.
- 2 Source
Press to toggle through Analog RGB, Composite, Component-i, S-video, and Analog YPbPr sources when multiple sources are connected to the projector.