

Showtec DJ-RG100 Laser

DMX Channels

Channel 1 –Mode

0-10	Laser Off
11-120	Dynamic Patterns
121-250	Static Patterns
251-255	Reset

Channel 2 –Pattern Selection

0-255	Num n Static / Dynamic
-------	------------------------

Channel 3 –X-Position

0-255	Adjust X-Position
-------	-------------------

Channel 4 –Y-Position

0-63	Adjust Y-Position
------	-------------------

Channel 5 –Scanning Speed

0-63	From Fast (0) to Slow (255)
------	-----------------------------

Channel 6 –Dynamic Pattern Play Speed

0-63	From Fast (0) to Slow (255)
------	-----------------------------

Channel 7 –Static Patterns Pattern Size

0-63	From Fast (0) to Slow (255)
------	-----------------------------

Channel 8 –Color Selection

0-101	Red + Green
102-200	Green
201-255	Red